


RUBBER SHEET FLOOR: Installation Guide

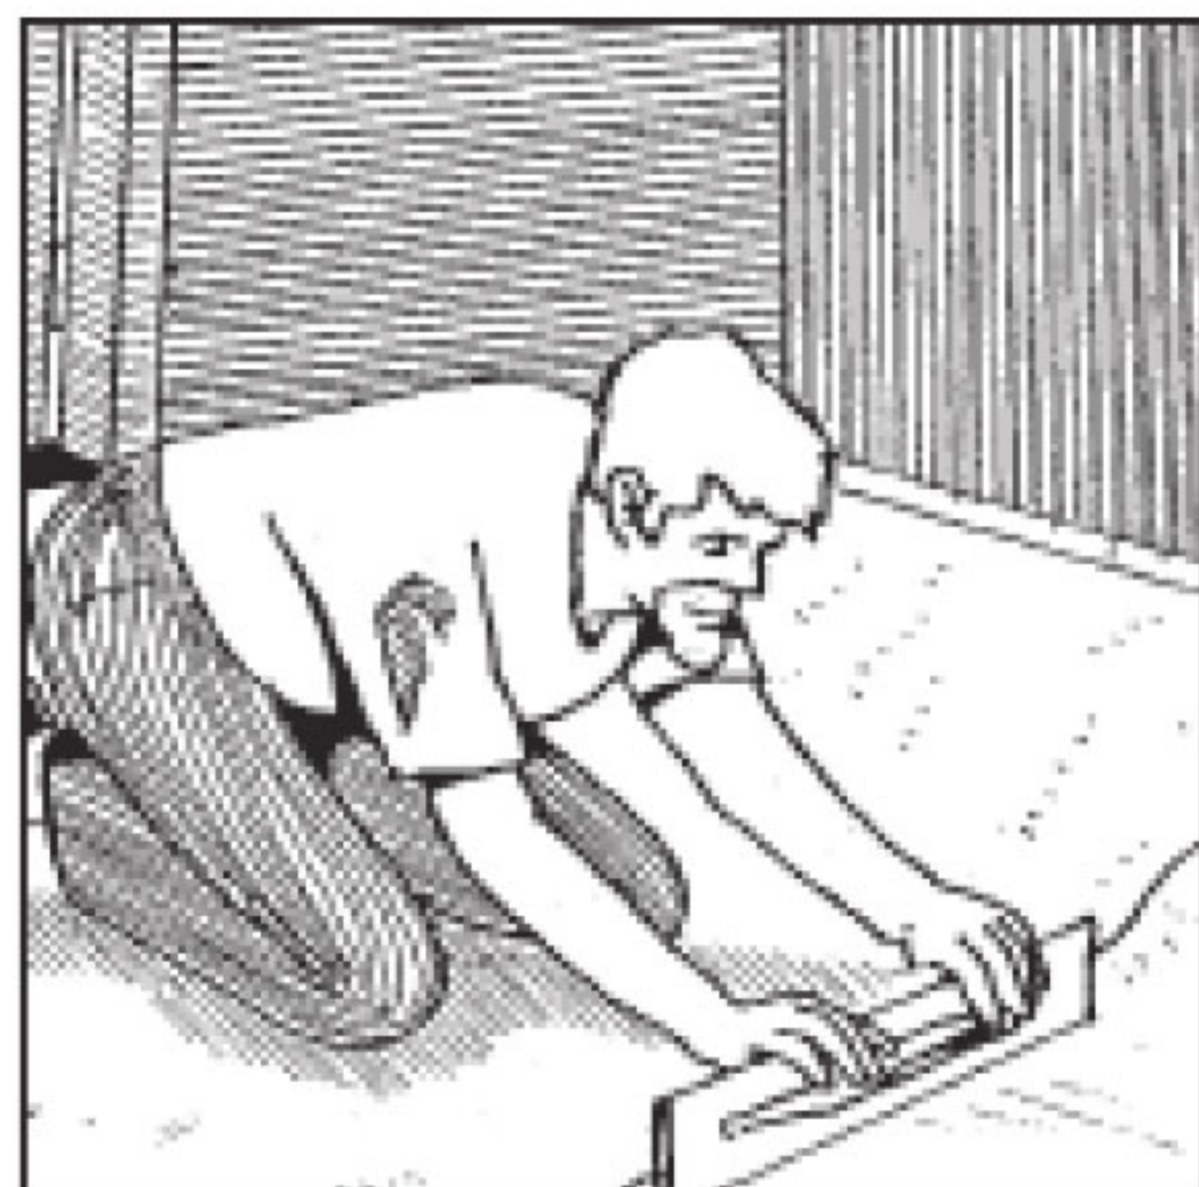

1. Level the sub-floor



2. Dry lay with overlapped seams



3. Double cut seams



4. Spread the glue



5. Roll using 100 lb. roller & eliminate all air bubbles

NOTE: Product, adhesive and floor must be at 68° Fahrenheit for 48 hours before installation. Clean all excess glue when wet. Keep all traffic off for 48 hours. Inspect rolls BEFORE installation. Do NOT install material with visual defects

allstaterubber.com

ALLSTATE RUBBER by Stoler Industries
2220 S Hamilton Extension Dalton, Georgia 30720
sales@allstaterubber.com



RUBBER SHEET FLOOR: Installation Guide (cont.)

- Set the rolls of rubber flooring & the glue in the room where they will be installed 48 hours before installation.
- The room temperature should not be below 68°F.
- Draw lines to mark off where rolls will be laid.
- 24 hours before installing, roll out the rolls onto the dry floor with the edges slightly turned up.
- Roll up a roll halfway and spread adhesive onto the floor.
- The sub-floor must be clean, flat and dry, all gaps and irregularities must be filled and leveled.
- Relative humidity 70% up.
- Lay the rolls onto the floor and roll with a 100 lb. roller so that the glue will stick evenly to the back of the flooring and any air bubbles will be removed.
- Do not wash floors for 7 days after installation.
- Make sure the seams between rolls are tight; remove any excess adhesive with a dry rag or a cloth dipped in a solvent cleaner.
- For installation under hospital beds or in areas with heavy wheeled traffic, use Epoxy cement.

IMPORTANT: No foot traffic is allowed 48 hours after installation. Keep wheeled traffic off floor for 7 days.